

# IN21003 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

#### **CAUTION**

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### **GENERAL**


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## **ASSEMBLY AND INSTALLATION**

- 1. Connect the stems (15)(16)(17), then screw them into the coupling (18) and the swivel (14). Secure with the wing nut (13).
- 2. Use mounting plate (7) as template to locate and drill holes for anchors (6). Secure the mounting plate (7) to the outlet box (1) and anchors (6) with provided screws.
- 3. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections.
- --Ribbed wire (w/o marking) from light to ribbed wire (2) from power source.
- --Smooth wire (w/o marking) from light to smooth wire (4) from power source.
- --Loop the ground wire (3) to mounting plate (7) with a ground screw (10).
- 4. Attach the canopy (12) against the outlet box (1). Secure with the ball nut (19).
- 5. Install bulbs: (bulbs not included)
- (Do not exceed the maximum capacity recommended on the sockets).

### INSTALLATION IS NOW COMPLETE

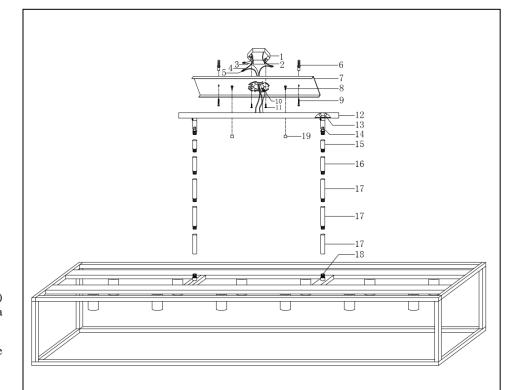

- 1. OUTLET BOX
- 2. WHITE WIRE
- GROUND WIRE
- 4. BLACK WIRE
- 5. WIRE CONNECTOR
- 6. PLASTIC WALL ANCHORS
- 7. MOUNTING PLATE
- 8. MACHINE SCREW
- 9. WOOD SCREWS
- 10. GROUND SCREW

- 11. MOUNTING SCREW
- 12. CANOPY
- 13. WING NUT
- 14. SWIVEL
- 15. STEM
- 16. STEM
- 17. STEM
- 18. COUPLING
- 19. BALL NUT